

Cuisinart®

Toast Maker

CMT200U



The Cuisinart logo, featuring the brand name in a white, sans-serif font on a dark blue square background.

Congratulations on your purchase of the Cuisinart 2 Slice Toast Maker.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment so that cooks at home as well as professional chefs have the tools to express their creativity.

All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day. That is why they have come to be regarded as the defining machines in their field by chefs across the world.

Whatever you cook, cook it better with Cuisinart.

Cuisinart®

Contents

Product Description 3

Safety Cautions 4

Instructions for Use 6

▪ **Re-heat setting 7**

▪ **Bagel setting 7**

▪ **Toasting techniques 7**

▪ **Crumb tray 8**

Cleaning and Maintenance 10

Guarantee 11

UK Wiring Instructions 12

UK After Sales Service 13

Cuisinart®

Product Description



Centering guide (not shown)

Extra wide toasting slots

Commercial grade cast metal housing

Extra lift carriage lever

Control dial with 6 browning levels,
re-heat & bagel settings

Pop-out stainless steel crumb tray

The Cuisinart logo, featuring the brand name in a white, sans-serif font on a dark blue square background.

Carefully read all the instructions before using the appliance and keep in a safe place for future reference

Safety Cautions

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- Never leave the appliance unattended when plugged in.
- Do not try to free food from the toaster when it is connected.
- Do not place excessively large foods, metallic packaging or any utensils inside the toaster.
- Never put your hands inside the toaster.
- Do not allow the lead to come into contact with hot surfaces.
- Increased adult supervision is required when the toaster is used in the presence of children and some disabled people. Not for use by children – keep out children's reach.
- The appliance housing can get hot whilst in use. Take care when handling.
- Bread may burn, therefore toasters must not be used near or below curtains or other combustible materials and must be carefully watched.
- Never pull the plug out of the mains socket by the lead.
- Always disconnect the toaster immediately after use and before cleaning.
- Do not immerse in water or in any other liquids or put in a dishwasher.

The Cuisinart logo is displayed in white text on a dark blue rectangular background.

- Do not use this appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by a special lead available from the manufacturer or its service agent. (See “UK After Sales Service” section).
- Do not use the Toaster if it has fallen or shows signs of damage. Discontinue use immediately. (Contact Cuisinart After Sales Service for further advice).
- No repair can be carried out by the user. Return the Toaster to the ‘Cuisinart Service Centre’ for inspection or repair/replacement. (See “UK After Sales Service” section).
- Use this appliance for toasting only as described within these instructions for use. Retain these for future reference.
- Do not allow the lead to overhang the edge of a kitchen table or worktop.
- For indoor use only.
- For domestic use only.
- Do not use any attachments other than those recommended or sold by Cuisinart.
- Always ensure that your hands are dry before removing the plug from the mains socket.
- This appliance complies with the basic requirements of Directives 89/336/EEC (Electromagnetic Compatibility) and 73/23/EEC (Safety of domestic electrical appliances), amended by Directive 93/68/EEC (CE Marking).
- Always ensure the voltage to be used corresponds with the voltage on the appliance, which is indicated on the bottom of the housing.

The Cuisinart logo is displayed in white text on a dark blue square background.

Instructions for Use

Remove all packaging from the product and unwind the power cord. Check that the crumb trays are in place and that there is nothing in the toaster slots. Plug the power cord into a suitable mains outlet and switch on.

N.B. The control dial display window will light up to indicate the appliance is switched on and ready to use.

- Turn the control dial to the desired position:

Dial setting	Colour
Re-heat	Re-heat
1-2	light
3-4	medium
5-6	dark
Bagel	Bagel

- To begin toasting, press the carriage lever(s) downwards until it locks into position.
- When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply lift the carriage lever(s) to interrupt.

The Cuisinart logo is displayed in white text on a dark blue square background.

Re-heat setting

The re-heat setting allows you to re-heat bread without browning or toasting. Simply turn the control dial to the 're-heat' setting and follow the instructions for use above.

Bagel setting

The bagel setting adds extra time to the toasting cycle to allow for thicker breads and bagels. Simply turn the control dials to the 'bagel' setting and follow the instructions for use.

Toasting Techniques

Toasting is a combination of cooking and drying of the bread, therefore, differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole wheat bread, use a higher setting than normal.
- Thickly cut pieces of bread (including bagels) will take longer to toast, since more moisture must be evaporated from the bread before toasting.
- Before toasting bagels, slice each bagel into two equal halves.
- When toasting raisin or other fruit breads, remove any loose raisins, etc, from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking to the centering guide wires in the slot.

The Cuisinart logo is displayed in white text on a dark blue square background.

- **Single Slice Toasting:**

If you are toasting a single slice of bread, set the dial setting at a lower level that you normally would. The toaster is designed to heat the whole toasting chamber for two slices. By lowering the heat for a single slice, you will not over-toast.

- **Toaster Pastries:**

Take extra care with toaster pastries; the filling can become very hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming. When toasting pastries, follow manufacturers instructions for use.

Crumb Tray

- The toaster is equipped with a pop-out CD style crumb tray. We recommend that the crumb tray is emptied on a regular basis.
- To empty, simply push and release crumb tray and it will pop-open. Slide out the crumb tray, discard the crumbs and replace the crumb tray. Never operate the toaster without the crumb tray in place.

The Cuisinart logo, featuring the brand name in a white, sans-serif font on a dark blue square background.

IMPORTANT

- Never force foods into the toasting slot, foods should fit freely between the centering guides.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Never insert any hard, sharp or metal instruments into the slots as this could cause damage to the toaster and cause a safety hazard.
- After use, always unplug your toaster from the mains outlet.

The Cuisinart logo, featuring the brand name in a white, sans-serif font on a dark blue square background.

Cleaning and Maintenance

- Always allow the toaster to cool completely before cleaning.
- Always unplug the toaster from the mains outlet.
- Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleaning agent to a cloth, not to the toaster, before cleaning.
- We recommend that the crumb tray is emptied and cleaned on a regular basis.
- To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake.

IMPORTANT: Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard.
- Never wrap the cord around the outside of the toaster.

The Cuisinart logo, featuring the brand name in a white, sans-serif font on a dark blue square background.

Guarantee

- This Cuisinart appliance is guaranteed for domestic consumer use for 5 years.
- The guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorized persons.
- If the appliance does not perform satisfactorily due to defects of material or manufacture, it will be repaired or replaced by the manufacturer (see UK after sales service for details).
- This guarantee is only valid in the United Kingdom (including Northern Ireland, Republic of Ireland, the Channel Islands and the Isle of Man).
- No responsibility will be accepted for any damage caused in transit.
- A charge may be made if goods are returned outside the relevant guarantee period or if the product is returned unnecessarily
- The manufacturer reserves the right to amend terms and specifications without prior notice.
- This guarantee in no way affects your statutory rights.

The Cuisinart logo is displayed in white text on a dark blue square background.

UK Wiring Instructions

- Your Cuisinart Toast Maker includes a BS 13 amp moulded (fused) mains plug on the supply cord.
- Should it be necessary at any stage to remove this moulded plug and replace it with a re-wireable BS 13 amp mains plug, the re-wiring should be completed as follows:

Class I (I) :

The wires in the mains lead are coloured in accordance with the following code:

GREEN & YELLOW = EARTH

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured Green & Yellow must be connected to the terminal in the plug which is marked with the letter E or \perp or coloured green or yellow.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

With this appliance, if a 13 amp plug is used, a 13 amp fuse should be fitted. If any other type of plug is used, a 13 amp fuse must be fitted, either in the plug or at the distribution board.

The Cuisinart logo, featuring the brand name in a white, sans-serif font on a dark blue rectangular background.

UK After Sales Service

For further advice on using your Cuisinart Toast Maker and other products in the Cuisinart range, contact the Cuisinart range, contact the Cuisinart Customer Care Line on 0870 240 6902 (9/00 to 17:00 hrs Monday to Friday) or, alternatively, email your enquiry to support@cuisinart.co.uk

In Guarantee

Return the product to the Cuisinart Service Centre at the following address:

 
Cuisinart Service Centre
P.O. Box 260
Warrington
WA5 1 FW

Enclose your name and address, together with proof of purchase and details of the fault. Cuisinart will either repair or replace the product, as appropriate.




Out of Guarantee

Contact the Cuisinart Customer Care Line on 0870 240 6902 (09:00 to 17:00 hrs Monday to Friday) or, alternatively, email your enquiry to support@cuisinart.co.uk for details of the standard repair or replacement charge. If you wish to proceed with the repair or replacement, return the product to the Cuisinart Service Centre at the following address:

Cuisinart Service Centre
P.O. Box 260
Warrington
WA5 1 FW



www.cuisinart.co.uk

   

Version no.: IB-4/331	
Open Size : 180MM(H) X 180MM(W) SADDLE STITCHED(16PP)	
Material: COVER&INSIDES:157GSM B/S ARTPAPER	
Coating: UV COATING	
Color: COVER & INSIDES:1C(BLACK)+1C(BLACK)	
Date: JULY-06-04	
Hugo Description :CMT200U IB-4/331(0,0) BOOK	
Operator: HAI	

